


AATi Recommended Installation Method for Fixing AATi Resin-based "Carburaati" Insert Bar to a Concrete/Wood substrate

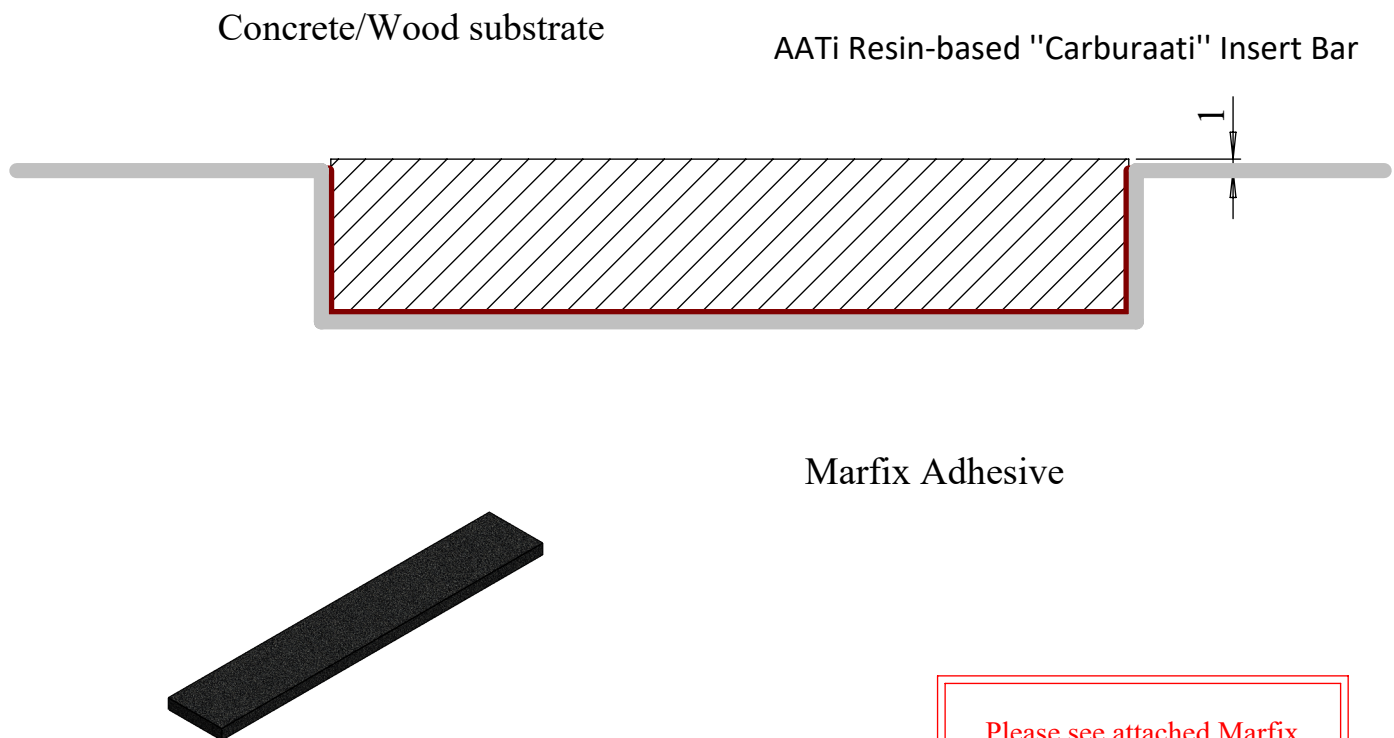

DATE	15/06/16
REVISION	3

1. Ensure surface is sound and level.
2. Make sure the recess is 1mm oversized than the Insert Bar .
3. The Insert Bar should be set 1-2mm higher than the surrounding surface.
4. Ensure the underside of the Insert Bar is abraded.
5. Both the recess and the Insert Bar should be free from grease and dirt etc.
6. Apply a layer of Marfix or similar approved adhesive and spread out evenly to cover the entire underside of the Insert Bar.
7. Press the Insert Bar into position.
8. There should be a small amount of Marfix adhesive oozing out the sides which indicates enough has been used to prevent water etc encroaching into the cavity.
9. Wipe clean any excess Marfix and leave to set as per manufacturers instructions.



Please see attached Marfix
COSHH & Guidance Notes.

NB: Nosing's must be installed in such a way that standing water is omitted. Please refer to AATi O&M Manual
All AATi products are subject to our manufacturing tolerances and should be taken into consideration when installing