


AATi Recommended Installation Guidelines for fixing into concrete.



DATE	15/06/16
REVISION	3

1. Ensure surface is sound and level.
2. Make good any worn or damaged areas with Ardex repair mortar (or similarly approved).
3. Make sure the recess is 1mm oversized than the Antislip Disc.
4. The Disc should be set 1mm higher than the surrounding surface.
5. Both the recess and the Disc should be free from grease and dirt etc.
6. Ensure the underside of the Disc is abraded.
7. Apply a layer of appropriate bedding compound such as Marfix or approved bedding compound to be spread out evenly to cover the underside of the Disc.
8. Place the Disc into position.
9. There should be a small amount of Marfix adhesive oozing out the sides which indicates enough has been used to prevent water etc encroaching into the cavity.
10. Wipe clean any excess Marfix and leave to set as per manufactures instructions.

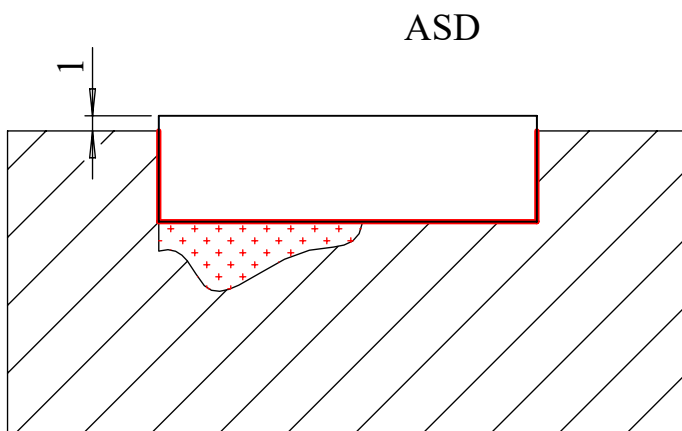

ASD

Marfix Adhesive


Fig 1. Section view fixing detail.

Existing concrete

Repair mortar

Fig 2. Isometric section view

NB: Recess should be oversized sufficiently to accept disc.

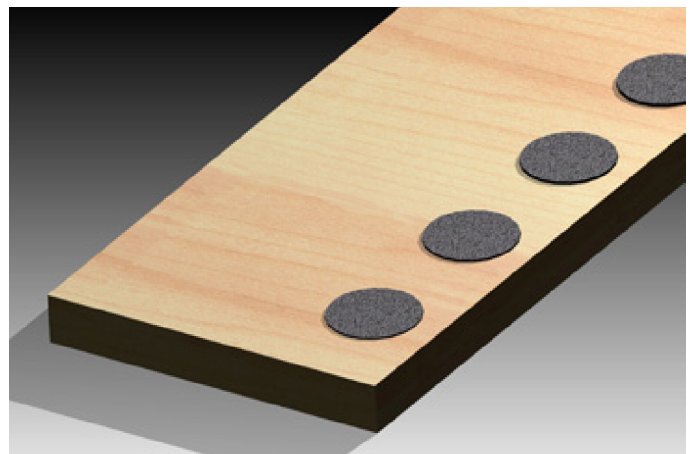

NB: Discs must be installed in such a way that standing water is omitted. Please refer to AATi O&M Manual
All AATi products are subject to our manufacturing tolerances and should be taken into consideration when installing