

# AATi Recommended Installation Guidelines For retrofitting SN293/WL/84 nosings to concrete.



DATE	14/06/16
REVISION	3

1. Ensure surface is sound and level.
2. Make good any worn or damaged areas or uneven surfaces with Ardex A46 or similar authorised rapid setting and hardening repair mortar (as below).



3. Position AATi nosing onto step in correct position.
4. Spot through holes using 7mm masonry drill bit.
5. Lift off nosing and drill spotted positions with 7mm Masonry drill bit to a depth of between 50-55mm.
6. Clean out dust/dirt from hole.
7. Insert Brown Rawlplug.
8. Apply Damp Proof Course (Rubberoid - Hyload original DPC) to cover the entire internal face of the nosing.
9. Place nosing back into position on step ensuring it is fully supported.
10. Fix by inserting appropriate length (2inch) countersunk pozi wood screw and tighten to form a secure fixing.

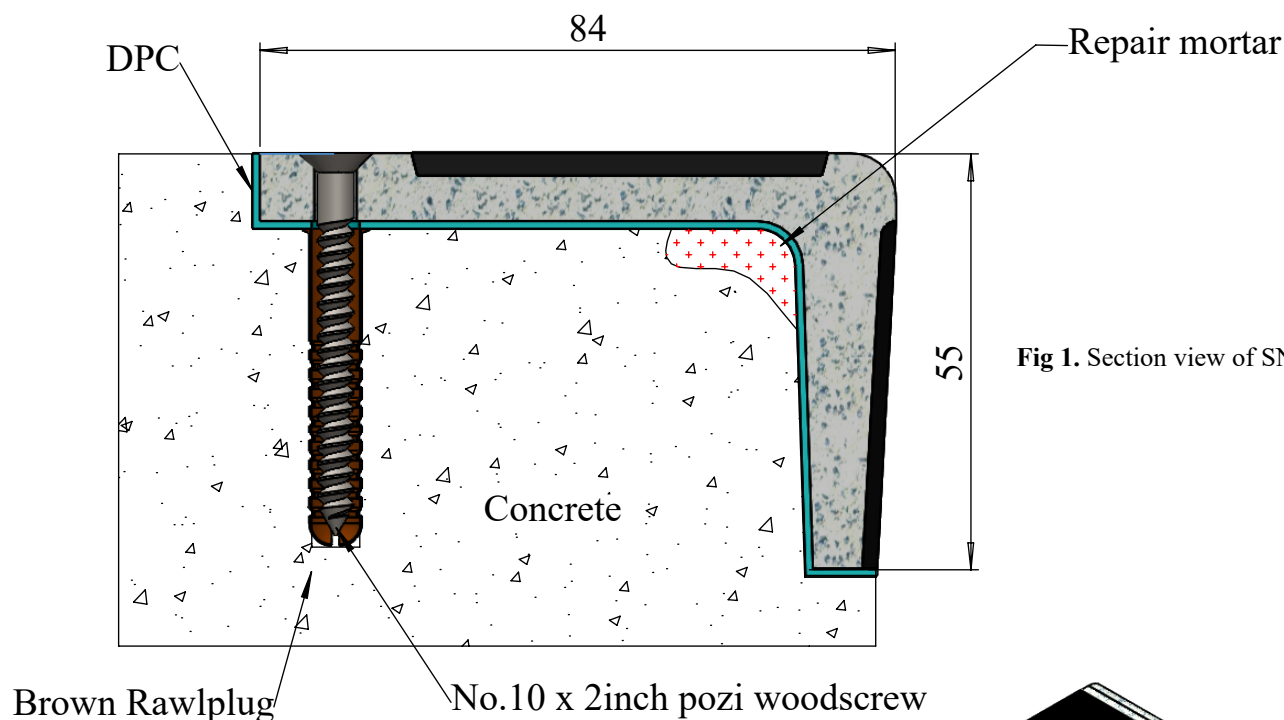


Fig 1. Section view of SN293/WL/84

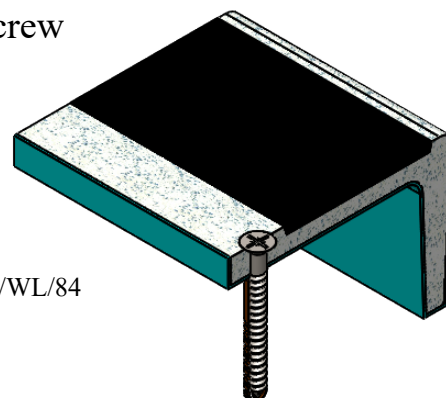


Fig 2. Isometric view of SN293/WL/84

**NB:** Nosing's must be installed in such a way that standing water is omitted. Please refer to AATi O&M Manual  
All AATi products are subject to our manufacturing tolerances and should be taken into consideration when installing